

EQUIS SCONCE

EQS-15S (15")

CAUTION

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE SHOCK

IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS OBTAIN THE SERVICES OF A QUALIFIED ELECTRICIAN

GENERAL

- Read all instructions carefully for safe operation and installation.
- All electrical connections must be in accordance with local and national electrical code (N.E.C) standards.
- Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction. Please contact Blackjack Lighting if any parts are missing or damaged.
- This product is suitable for damp locations.

INSTALLATION**PREPARATION**

1. Remove the fixture from its box.
2. Remove the decorative plate/ acrylic lens assembly(11/14) from the back panel(10) by loosening the four screws(15).

MOUNTING

3. Pull the supply wires(2&4) and the house ground wire(6) out of the outlet box(1). Temporarily the attach Back panel(10) to the outlet box(1) by using the two mounting screws(9). Mark the two mounting hole locations (for the anchor screws(12)) on the wall behind the backplate.
4. Remove the back panel(10) from the ceiling. Drill the two holes using the appropriately sized drill bit. Insert the provided wall anchors(13) into the holes. First insert the anchor screws(12) into the holes in the back plate(10), then screw the anchor screws(12) halfway into the wall anchors. Further attach the back panel(10) to the outlet box(1) by using the two mounting screws(9). Afterward fully tighten the anchor screws(12).

ELECTRICAL CONNECTIONS

5. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire (3); connect the black supply wire(4) to the black fixture wire(5); and connect the house ground wire(6) to the fixture ground wire(7).

FINAL ASSEMBLY

6. To secure the decorative plate/ acrylic lens assembly(11/14) to the back panel(10) align the holes on the top and bottom of the assembly(11/14) with the holes on the top and body of the back plate(10) then insert and tighten the four screws(15).

DIMMING

- Fixture Dimming Type: TRIAC dimmable
- For recommended dimmers see <https://www.blackjacklighting.com/dimming-information>

HARDWARE



Wire Connectors (#8)
[3 Included]



Mounting Screws (#9)
[2 Included]




Anchor Screws (#12)
[2 Included]



Anchor (#13)
[2 Included]



Screws (#15)
[4 Included]

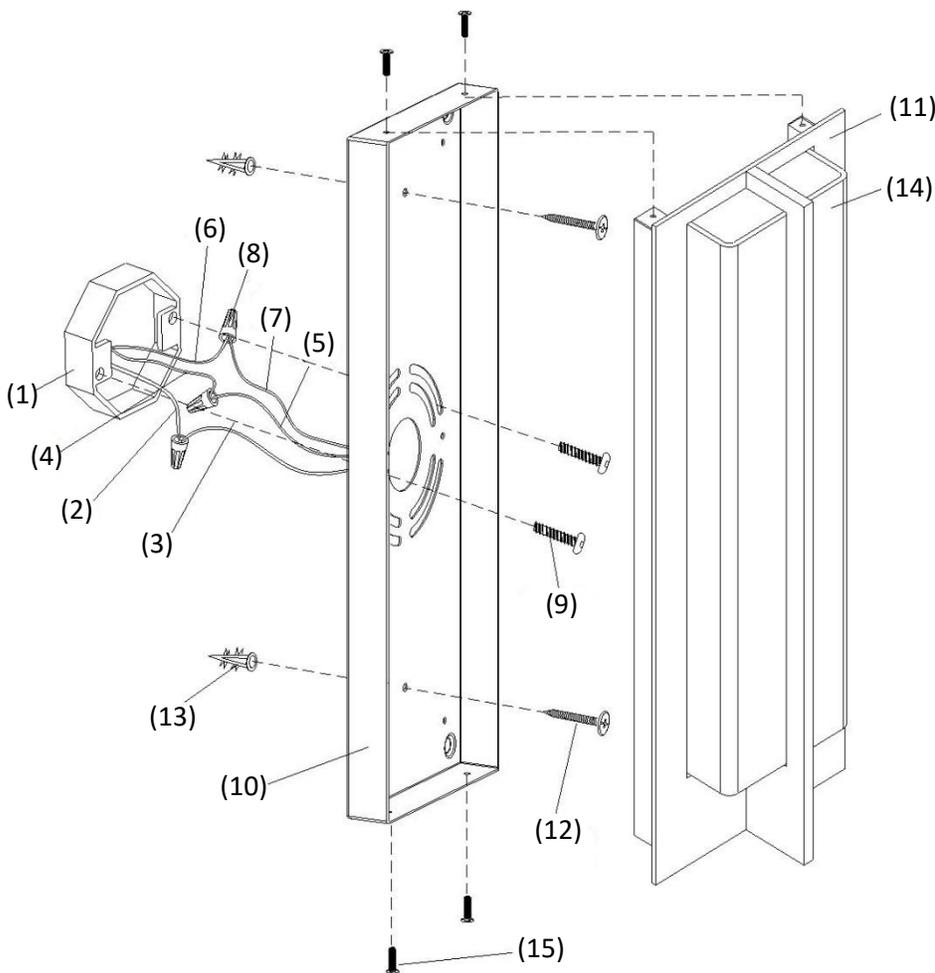

1. OUTLET BOX (by others)
2. WHITE SUPPLY WIRE
3. WHITE FIXTURE WIRE
4. BLACK SUPPLY WIRE
5. BLACK FIXTURE WIRE
6. HOUSE GROUND WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTOR
9. MOUNTING SCREWS
10. BACK PANEL
11. DECORATIVE PLATE
12. ANCHOR SCREW
13. ANCHOR
14. ACRYLIC LENS
15. SCREWS