

KONA PENDANT

KNA-48P (48")

CAUTION

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE SHOCK

IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS OBTAIN THE SERVICES OF A QUALIFIED ELECTRICIAN

GENERAL

- Read all instructions carefully for safe operation and installation.
- All electrical connections must be in accordance with local and national electrical code (N.E.C) standards.
- Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction. Please contact Blackjack Lighting if any parts are missing or damaged.
- This product is suitable for damp locations.

INSTALLATION**PREPARATION**

1. Remove the fixture from its box. Be careful not to kink the wires when unpacking the wire/ pendant assemblies(20).
2. Remove the back plate(10) from the canopy cover(11) by loosening the two decorative nuts(13).

MOUNTING

3. Place the back plate(10) over the outlet box(1). Drill four support holes for the anchors(21) using the appropriately sized drill bit. Insert the provided ceiling anchors(21) into the holes. First screw the anchor screws(22) halfway into the ceiling anchors(21); when the back plate(10) is properly aligned in the installation, fully tighten all of the anchor screws(22). Insert the mounting screws(9) through the slots in the back plate(10). Secure them tightly into the outlet box(1). ((Optional) If the back plate(10) alone will not cover the outlet box(1) completely, you can order a ceiling plate(12) that will completely cover the outlet box(1). To mount the optional ceiling plate(12) to the outlet box(1), first thread the mounting screws(9) first through the holes in the back plate(10), then through the optional ceiling plate(12). Insert and tighten the mounting screws(9) into the outlet box(1). Then insert and tighten the anchor screws(22) into the ceiling anchors(21)).
4. Pull the supply wires(2&4) and the house ground wire(6) out of the outlet box(1) and thread them through the large center hole in back plate(10).
5. Temporarily suspend the canopy cover(11) from the back plate(10) by attaching the loops(18)(attached to the lifting rope(16)) to the mating hooks(17)(attached to the back plate(10)).

ELECTRICAL CONNECTIONS

6. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire(3); connect the black supply wire(4) to the black fixture wire(5); and connect the house ground wire(6) to the fixture ground wire(7).

FINAL ASSEMBLY

7. Determine the appropriate length of each suspension cable (if in doubt about exact length needed, leave a little extra cable until final installation of the canopy cover(11)). Push the excess cable up into the canopy by pressing the small barrel of the gripper(19) upward. This will release the cable tension and allow the suspended cable to be pulled through gripper(19). Roll excess cable into a small loop inside the canopy. Wrap the supplied Velcro strap around this loop to keep the excess cable from falling outside the canopy cover(11).
8. Connect the male driver connector(24) to the wire harness female connector(25).
9. Make sure all the wires are carefully placed inside the canopy cover(11). Align the holes on the canopy cover(11) over the outward screws(15). Secure the canopy cover(11) to the back plate(10) by tightening the two decorative nuts(13) onto the outward screws(15).
10. Once the canopy is in place, fine tune the cable lengths longer or shorter to get each pendant adjusted to its

preferred length by adjusting the gripper(19).

11. Once the length of each wire has been established, any remaining bends or kinks in the wire can be straightened by bending out the kinks by hand while heating the cord up with the warm air from a hair dryer or heat gun.

DIMMING

- Fixture Dimming Type: TRIAC / ELV or 0-10V dimmable.
- For recommended dimmers see <https://www.blackjacklighting.com/dimming-information>

HARDWARE



Wire Connector(#8)

[3 Included]



Mounting Screw(#9)

[2 Included]



Decorative Nut(#13)

[2 Included]



Outward Screw(#15)

[2 Included]




Anchor(#21)

[4 Included]



Anchor Screw (#22)

[4 Included]

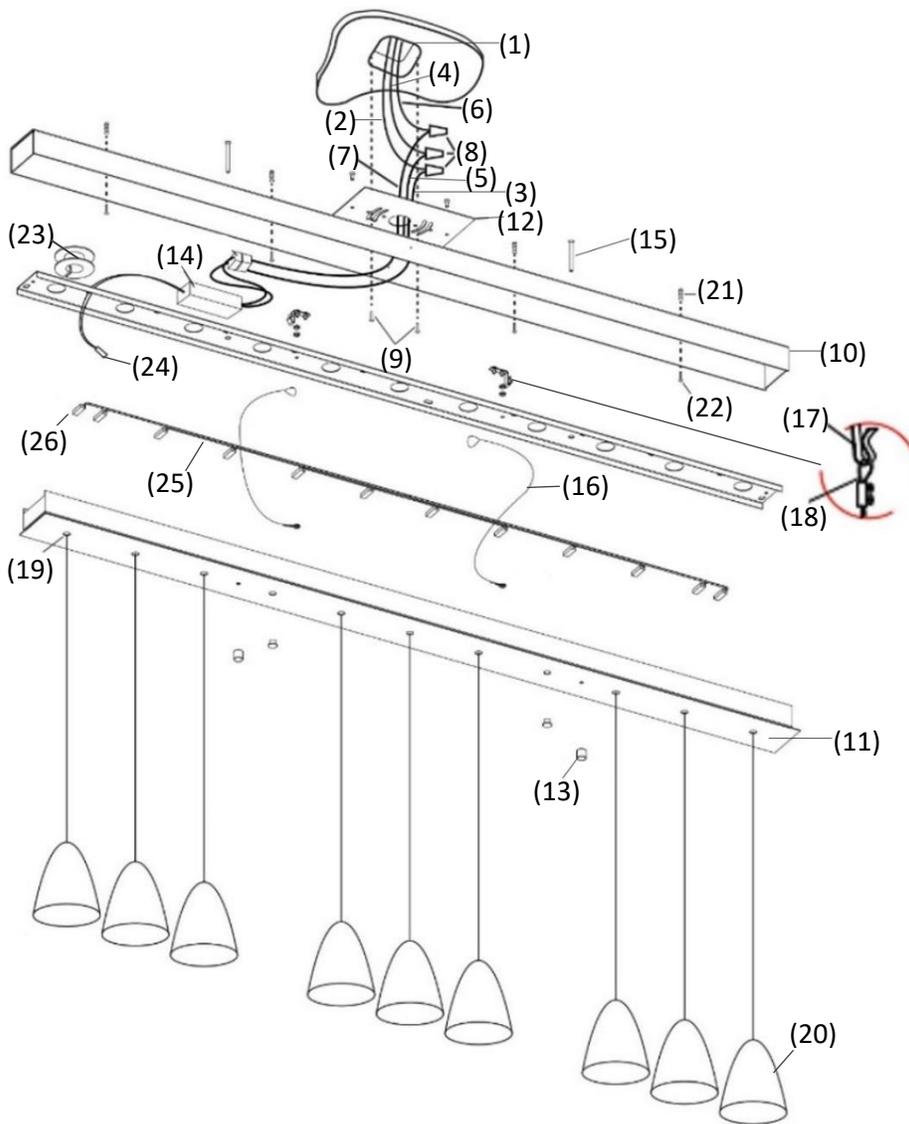

1. OUTLET BOX (by others)
2. WHITE SUPPLY WIRE
3. WHITE FIXTURE WIRE
4. BLACK SUPPLY WIRE
5. BLACK FIXTURE WIRE
6. HOUSE GROUND WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTORS
9. MOUNTING SCREWS
10. BACK PLATE
11. CANOPY COVER
12. (OPTIONAL) CEILING PLATE
13. DECORATIVE NUT
14. DRIVER
15. OUTWARD SCREWS
16. LIFTING ROPE
17. HOOK
18. LOOP
19. GRIPPER
20. BULLET PENDANT
21. ANCHOR
22. ANCHOR SCREW
23. WIRE SPOOL
24. DRIVER MALE CONNECTOR
25. WIRE HARNESS FOR PENDANTS
26. FEMALE WIRE HARNESS CONNECTOR