

**TRIA PENDANT**

TRI-05P (8")

**CAUTION**

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE SHOCK

IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS OBTAIN THE SERVICES OF A QUALIFIED ELECTRICIAN

**GENERAL**

- Read all instructions carefully for safe operation and installation.
- All electrical connections must be in accordance with local and national electrical code (N.E.C) standards.
- Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction. Please contact Blackjack Lighting if any parts are missing or damaged.
- This product is suitable for damp locations.

**INSTALLATION****PREPARATION**

1. Remove the fixture from its box.
2. Separate the ceiling plate(10) from the canopy cover(11) by loosening the two decorative nuts(16).

**MOUNTING**

3. Pull the supply wires(2&4) and the house ground wire(6) out of the outlet box(1). Thread the wires through the large center hole in the cross bar(12). Place the mounting screws(9) through the holes in the cross bar(12), then secure them to the outlet box(1).
4. Place the ceiling plate(10) over the cross bar(12) through the two outward screws(13), thread the wires through the large center hole in the back of the ceiling plate(10). Secure the ceiling plate(10) to the cross bar(12) by tightening the two nuts(14) over the outward screws(13).

**ELECTRICAL CONNECTIONS**

5. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire(3); connect the black supply wire(4) to the black fixture wire(5); and connect the house ground wire(6) to the fixture ground wire(7).

**FINAL ASSEMBLY**

6. Slightly loosen the horizontal wire retainer(20) by loosening the screws on either side of the barrel.
7. Temporarily mount the canopy cover(11) to the ceiling plate(10) by attaching the loop(18) to its mating hook(17)(located inside the ceiling plate(10)). Adjust the two suspension cables(21) to the appropriate length by either pushing the individual cable up into the adjustable gripper(19) or pushing the small barrel upward (located on the bottom of the adjustable gripper(19)). This will release the cable tension and allow the suspended cable(21) to increase in length.
8. Once the cable is adjusted to the approximate mounting length use the attached twist ties to retain the excess cable into neat loops that will fit inside of the canopy cover(11).
9. To secure the canopy cover(11) to the ceiling plate(10) align the holes on the bottom of the canopy cover(11) with the ceiling plate screws(15). Then tighten the two decorative nuts(16) to secure them together.
10. Once the canopy(11) is in place; fine tune the fixture suspension cable(21) lengths to get the fixture level and the two cables even in length using the adjustable gripper(19). For additional fine tuning of the pendant alignment, with two fingers slightly twist one of the suspension cables(21) right near the gripper(19) until the pendant rotates

to the correct facing direction. (Twist the right cable to the right to rotate the fixture to the right. Twist the left cable to the left to rotate the fixture to the left).

**11.** When both cables are hanging straight and parallel, tighten the screws on both ends of the horizontal wire retainer(20) to secure them in position.

### DIMMING

- Fixture Dimming Type: TRIAC dimmable
- For recommended dimmers see <https://www.blackjacklighting.com/dimming-information>

### HARDWARE



**Wire Connectors (#8)**  
[ 3 Included ]



**Mounting Screws (#9)**  
[ 2 Included ]




**Outward Screws (#13)**  
[ 2 Included ]



**Nut (#14)**  
[ 2 Included ]



**Decorative Nut (#16)**  
[ 2 Included ]

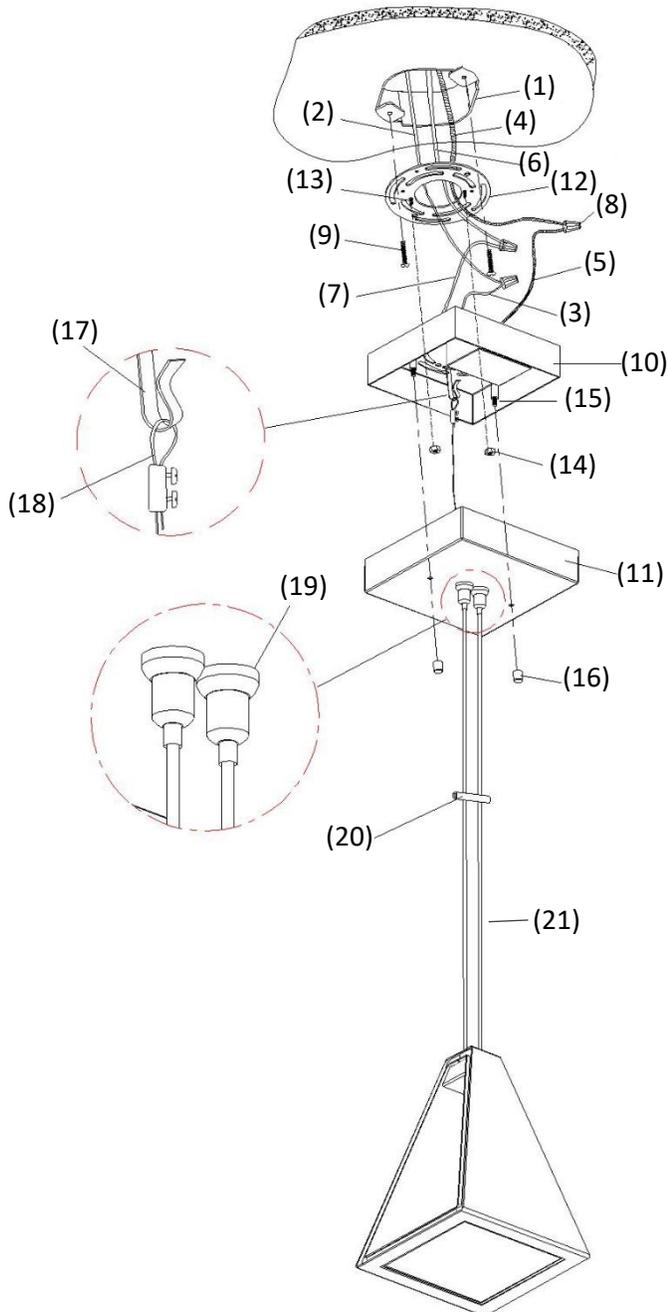

1. OUTLET BOX (by others)
2. WHITE SUPPLY WIRE
3. WHITE FIXTURE WIRE
4. BLACK FIXTURE WIRE
5. BLACK SUPPLY WIRE
6. HOUSE GROUND WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTORS
9. MOUNTING SCREWS
10. CEILING PLATE
11. CANOPY COVER
12. CROSS BAR
13. OUTWARD SCREWS
14. NUT
15. CEILING PLATE SCREWS
16. DECORATIVE NUT
17. HOOK
18. LOOP
19. GRIPPER
20. WIRE RETAINER
21. SUSPENSION CABLE